



Gas Shock Installation

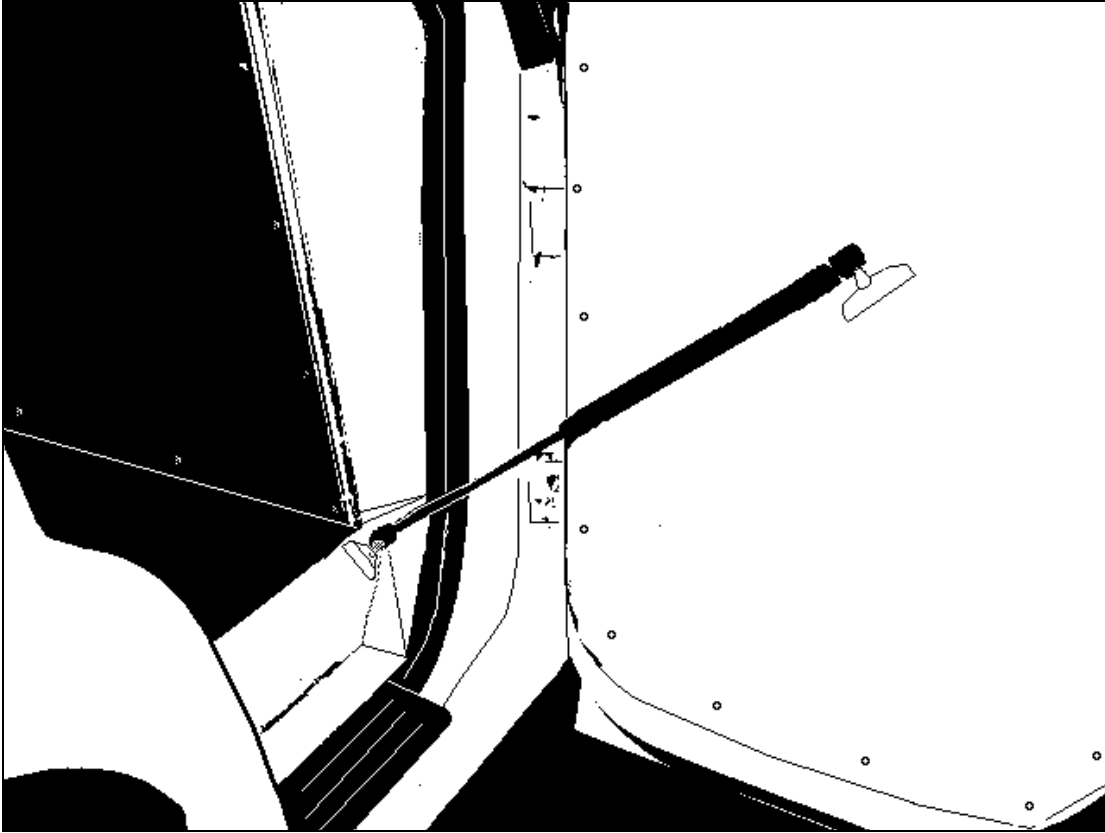

Install shock at an angle with rod of shock pointing down. Mount shock with door fully open. The shock should be compressed $\frac{1}{4}$ to $\frac{1}{2}$ inch from extended.

Gas shock should not bind or be fully compressed or extended through full travel of door!!!

Remove the door check for smoother opening.

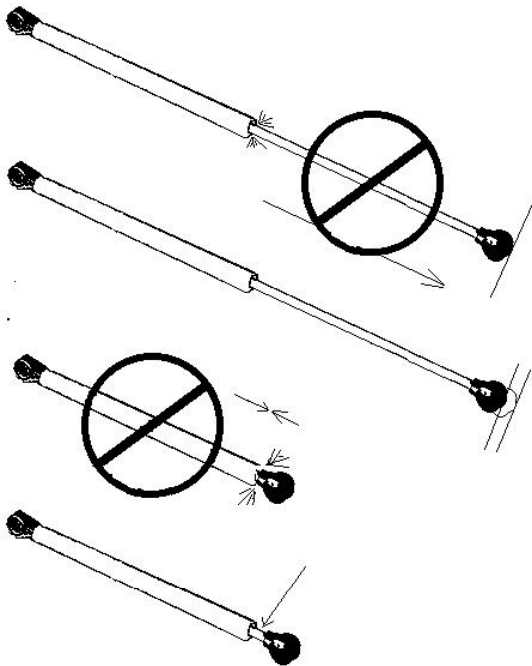

AceK9.comTM

Radiotronics Inc.
1556 Cypress Drive
Jupiter Fl. 33458
561-746-0935
AceK9.com